

Blue Steel CXT3000/CXT4000 CompletePBX: Getting Started Guide

Package Contents

- Blue Steel CXT3000/CXT4000 (2U 19" width unit)
- Power cord
- Support hardware for 19" cabinet
- CompletePBX software preinstalled on the hardware
- 4 x Astribank power cables
- Key for hard disk drive bays

Prerequisites

You need a computer equipped with an Internet browser. Firefox is recommended.

Step 1: Earthing the Unit

- 1) For safety and performance reasons, it is essential to ground the unit.
Note: Not properly grounding this device will void your warranty!
- 2) Use a star washer to securely connect a grounding tab to the grounding screw on the rear panel.
- 3) Using 12-16 gauge wire, connect the grounding tab to a reliable ground.
- 4) All Xorcom hardware should be connected to a common grounding point.

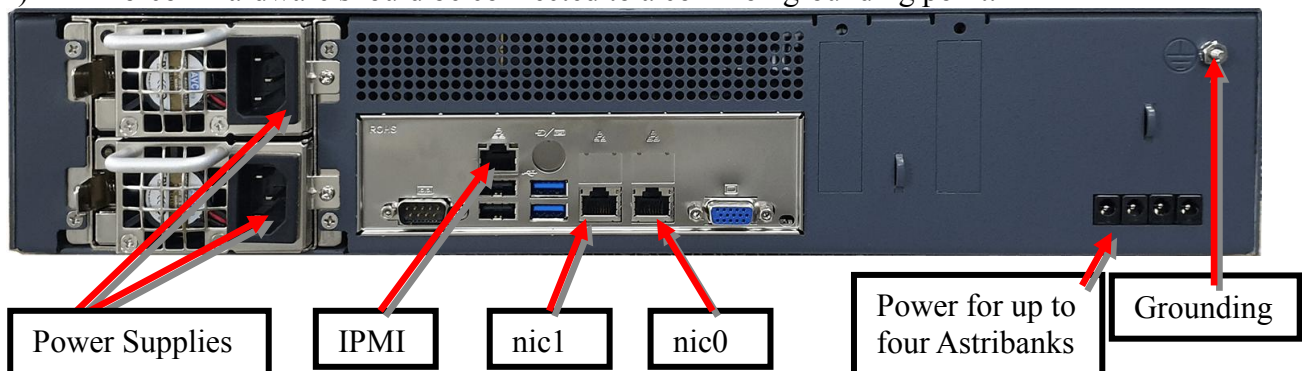


Figure 1: Detail of Blue Steel Rear Panel

Step 2: Powering Up the Unit

- 1) Connect the unit to the LAN.
- 2) Connect the power cord to the device and turn on the power using the power button on the front panel. The device startup process takes about 2 minutes. The startup time depends on the number of telephony ports installed in your Blue Steel CXT3000/CXT4000 unit. You will see the "Loading..." notification on the Liquid Crystal Display (LCD) panel. When the booting process is near completion, "XORCOM" will appear on the LCD panel.

Additional Information

Scan the QR code on the front panel of the Blue Steel for easy access to all relevant product information *for this specific product*, including detailed technical documentation, “how to” videos, and more.

Alternatively, for additional “getting started” topics only, such as:

- Configuring (or Getting) the IP Settings
- Configuring the IP-PBX
- Understanding the Unit Status LED (Light Emitting Diode) Indicators

Scan the code at right or download:



http://www.xorcom.com/files/techdocs/PM0622-Blue-Steel_CXT3000-CXT4000-Getting-Started-Guide.pdf