




## Basic Call Features

### Placing a Call

#### Using the handset:

1. Pick up the handset.
2. Enter the number, and then press the **Send** soft key.

#### Using the speakerphone:

1. With the handset on-hook, press .
2. Enter the number, and then press the **Send** soft key.

#### Using the headset:

1. With the headset connected, press  to activate the headset mode.
2. Enter the number, and then press the **Send** soft key.

**Note:** During a call, you can alternate between headset, hands-free speakerphone and handset modes by pressing the **Headset** key or the **Speakerphone** key or picking up the handset. Headset mode requires a headset connected.

### Answering a Call

#### Using the handset:

Pick up the handset.

#### Using the speakerphone:

Press .

#### Using the headset:

Press .

**Note:** You can ignore an incoming call by pressing the **Reject** soft key.

### Ending a Call

#### Using the handset:

Hang up the handset or press the **Cancel** soft key.



 


#### Using the speakerphone:

Press  or the **Cancel** soft key.



#### Using the headset:

Press the **Cancel** soft key.

### Redial


- Press  to enter the **Dialed Calls** list, press  or  to select the desired call, and then press  or the **Send** soft key.
- Press  twice when the phone is idle to call the last dialed number.

### Call Mute and Un-mute


- Press  to mute the microphone during a call.
- Press  again to un-mute the call.

 
 

### Call Hold and Resume

#### To place a call on hold:

Press  or the **Hold** soft key during an active call.

#### To resume the call, do one of the following:

 

- If there is only a call on hold, press  or the **Resume** soft key.

- If there is more than one call on hold, press  or  to select the desired call, and then press  or the **Resume** soft key.

 


### Call Transfer

You can transfer a call in the following ways:




#### Blind Transfer

1. Press  or the **Transfer** soft key during an active call. The call is placed on hold.
2. Enter the number you want to transfer to.
3. Press  or the **Transfer** soft key.

#### Semi-Attended Transfer

1. Press  or the **Transfer** soft key during an active call. The call is placed on hold.
2. Enter the number you want to transfer to, and then press .
3. Press  or the **Transfer** soft key when you hear the ring-back tone.

#### Attended Transfer

1. Press  or the **Transfer** soft key during an active call. The call is placed on hold.
2. Enter the number you want to transfer to, and then press .
3. Press  or the **Transfer** soft key when the second party answers.

### Call Forward

#### To enable call forward:

1. Press the **Menu** soft key when the phone is idle, and then select **Features->Call Forward**.
2. Select the desired forward type:
  - Always Forward**----Incoming calls are all forwarded unconditionally.
  - Busy Forward**----Incoming calls are forwarded when the phone is busy.
  - No Answer Forward**----Incoming calls are forwarded when the phone is not answered after a preset time period.
3. Enter the number you want to forward to. For **No Answer Forward**, enter the ring time to wait before forwarding.
4. Press the **Save** soft key to accept the change.

### Call Conference

1. Press the **Conf** soft key during an active call. The call is placed on hold.
2. Enter the number of the second party, and then press the **Send** soft key.
3. Press the **Conf** soft key again when the second party answers. All parties are now joined in the conference.
4. Hang up the handset to disconnect all parties.

**Note:** You can split the conference call into two individual calls by pressing the **Split** soft key.

### Speed Dial

#### To configure a speed dial key:

1. Press the **Menu** soft key when the phone is idle, and then select **Features->DSS Keys**.
2. Select the desired DSS key, and then press the **Enter** soft key.
3. Select **Speed Dial** from the **Type** field, select the desired line from the **Account ID** field, and enter the number in the **Value** field.
4. Press the **Save** soft key to accept the change.

#### To use the speed dial key:

Press the speed dial key to dial out the preset number.